

When to call a technician in Charlotte NC

Refrigerator warning signs

- 1 Running constantly**
Compressor overworking -- check condenser coils first.
- 2 Food spoiling faster than normal**
Temperature problem -- call a tech.
- 3 Frost buildup in freezer**
Defrost heater or thermostat failure.
- 4 Ice maker stopped working**
Check water filter first, then call if still not working.

Washer warning signs

- 1 Clothes coming out soaking wet**
Spin cycle not completing -- drainage or belt issue.
- 2 Musty smell after cleaning**
Mold in drum housing or bearing area -- needs service.
- 3 Banging or grinding during cycle**
Bearing wear or foreign object -- stop and call.

Dryer warning signs

- 1 Takes 2 cycles to dry a normal load**
Blocked vent or failing heating element.
- 2 No heat at all**
Blown thermal fuse or heating element failure.
- 3 Squealing or banging noise**
Drum seal, idler pulley, or roller wear.

Oven and dishwasher warning signs

- 1 Oven heating unevenly or slow to preheat**
Failing bake element or temperature sensor.
- 2 Gas burner won't light**
Igniter wear -- do not attempt to bypass the igniter yourself.
- 3 Dishwasher not draining after cycle**
Check filter first, then call if standing water persists.
- 4 New grinding or clicking sounds from any appliance**
Stop using it and call for a diagnostic.

Just Call Appliance Repair covers Charlotte, Huntersville, Concord, Matthews, and Mint Hill.